

Tile **it**

How to apply Self-Adhesive Premium Composite Wall Tiles



Tools for the job


- * Utility knife
- * Cloth
- * Water spray bottle
- * Measuring tape
- * Metal ruler or straight edge

STEP 1



Clean the surface thoroughly to remove any grease or dirt.

STEP 2

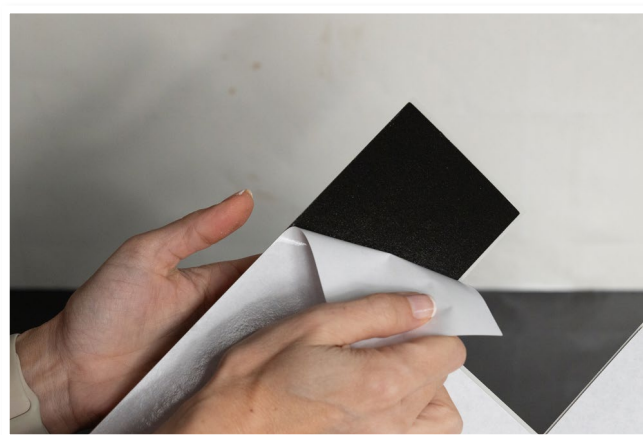

Peel back the backing paper to reveal the adhesive side.

STEP 3



Spray the reverse of the tile with water (this helps for repositioning the tile).

STEP 4



Stick the tile gently into place, it can be repositioned if you make an error.

STEP 5



The tiles interlink together, make sure there is no gap.

STEP 6



The tiles can be cut for going around sockets very easily, score them using a utility knife.

STEP 7



Once scored, they can be snapped back as shown.

USEFUL TIP!

Tiles can be applied to a flat wall or existing flat tiles.