



Application instructions – static

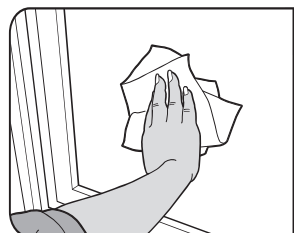


1 In order to apply the film properly, please clean glass, thoroughly and apply only to a flat surface.




2 Measure to the size required using the grid on the backing paper – please allow 2 mm distance to the window frame – cut film carefully.

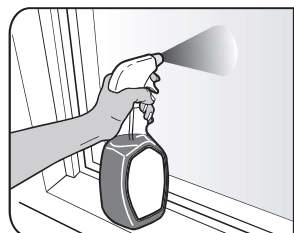


3 Spray glass with enough water.

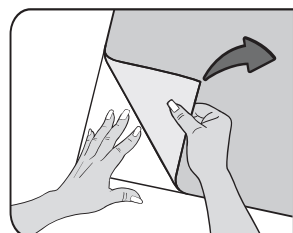

4 Remove backing paper completely and position film on the glass.

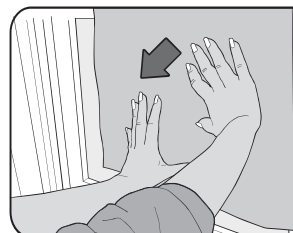

4.1 Spray film surface with water. Using a squeegee, remove moisture starting from the centre out to the edges.

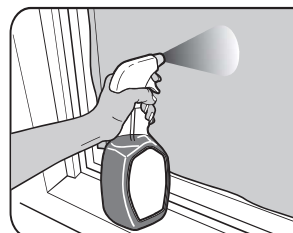

5 Spray film surface with water. Using a squeegee, remove moisture starting from the centre out to the edges.



5.1